

遠距型微粒子計數器軟體

The Software of Real time Remote Counter

TSI AeroTrak 7xxx

TSI 7310/7510/7301/7501...

2ch or 4ch

Software Connect to multi-counter



拓生科技有限公司
Toson Technology Co., Ltd
jack@toson.com.tw
+886-3-6676443#18
Jack Tsai

設定多個機器之IP位置範圍Setting IP Adresses

ZEL-100 Data LoMo

Zeta DataLogger Series

T3BEE84A9A1-960484E0-FC159FEA-1F5FBDCE

Ver 3.1.0.3

NET

RS-485

IP Address

192

168

200

From

90

To

95

連接

離開

即時顆粒數 Real Time Counts


包含點位, 粒徑大小, 型號, 顆粒數, 可中英文切換

Including Sample points, sizes, Model, Counts, Multi-Language

The screenshot shows the ZEL-100 Data LoMo software interface. At the top, there is a header bar with the TOSON logo and the slogan "UNDERSTANDING, ACCELERATED". A language selection dropdown is set to "Language". An "Exit" button is located in the top right corner. Below the header, there are five tabs: "RealTime Value", "RealTime Curve", "Device Setting", "History data", and "History Curve". The "RealTime Value" tab is active, displaying a table of real-time data. The table has two columns for different channels. The first column shows "CH1 0.3um" with a count of 915. The second column shows "7301-01F 0.5um" with a count of 39. Both counts are displayed in large green digits on a black background. Below the counts, the labels "顆#" and "#" are visible. The IP address "192.168.200.92" is shown for both channels. The table has three rows, with the first row containing data and the other two rows being empty.

RealTime Value	RealTime Curve	Device Setting	History data	History Curve
CH1 0.3um 192.168.200.92 1 915 顆#	7301-01F 0.5um 192.168.200.92 2 39 #			

即時趨勢圖 Real Time Curve

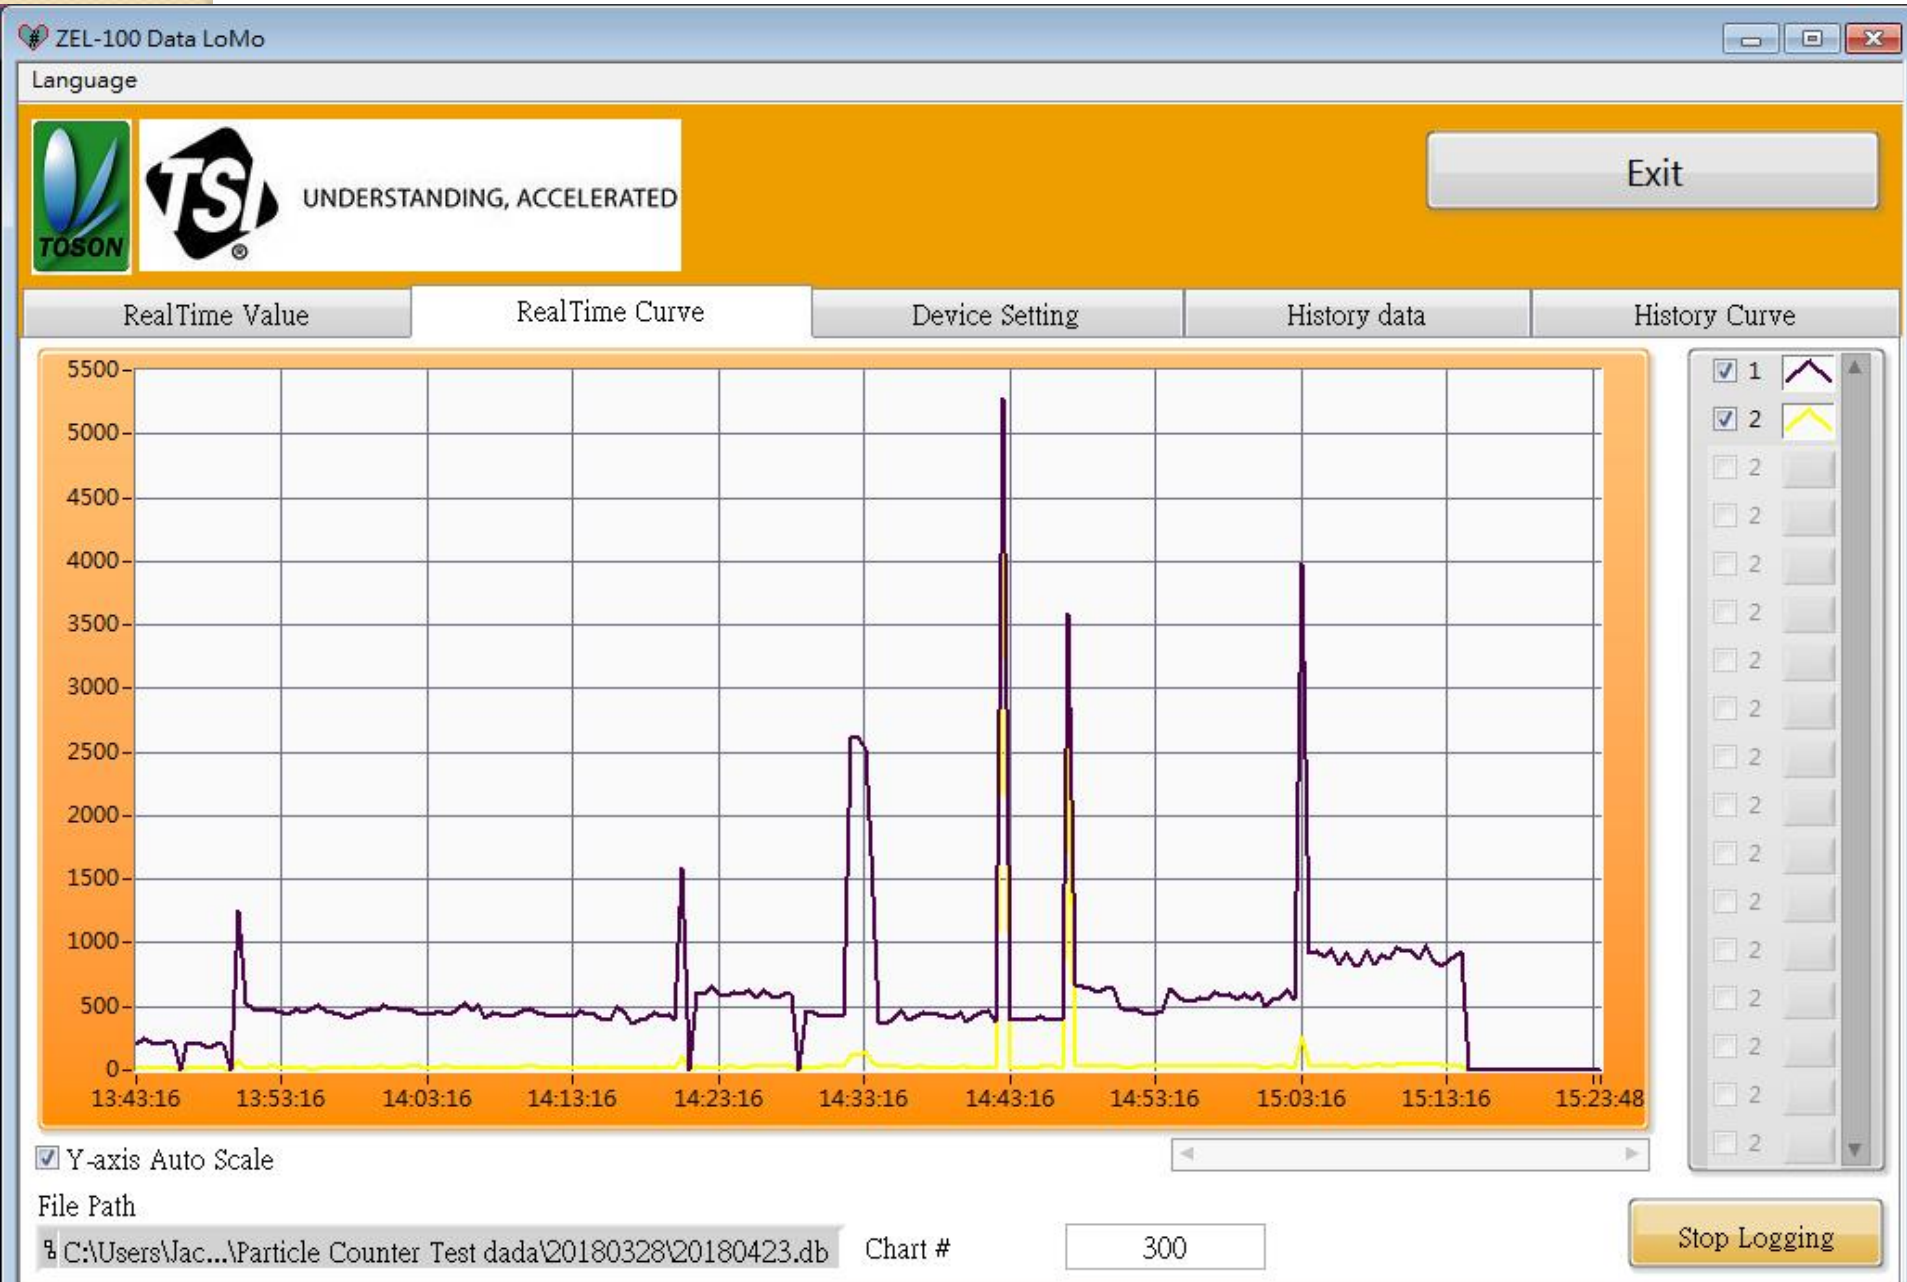



機器設定 Device Setting

警報值, 語言, 單位, 尺寸等 Alarm limit, Language, Sizes....

ZEL-100 Data LoMo

Language

  UNDERSTANDING, ACCELERATED

Exit

RealTime Value RealTime Curve **Device Setting** History data History Curve

ID: 192.168.200.92 Model Name: 7301-01F Serial Number: 73011609001 Apply Config

Refresh Rate(Sec): 30 Load Config



Value

Item	Unit	Item	Unit	Item	Unit	Item	Unit
CH1 0.3um	顆#	7301-01F	#				
Size(nm)		Size(nm)		Size(nm)		Size(nm)	
300		500		0		0	
<input type="checkbox"/> Alarm		<input type="checkbox"/> Alarm		<input type="checkbox"/> Alarm		<input type="checkbox"/> Alarm	
Alarm upper	Alarm lower	Alarm upper	Alarm lower	Alarm upper	Alarm lower	Alarm upper	Alarm lower
0	0	0	0	0	0	0	0
<input type="checkbox"/> Correction		<input type="checkbox"/> Correction		<input type="checkbox"/> Correction		<input type="checkbox"/> Correction	
Max Value	Min Value	Max Value	Min Value	Max Value	Min Value	Max Value	Min Value
0	0	0	0	0	0	0	0

原始資料 History Data

ZEL-100 Data LoMo

Language

  UNDERSTANDING, ACCELERATED

Exit

RealTime Value RealTime Curve Device Setting History data History Curve


Table

20180423

ID	Date	C92_1	C92_2
125	1524465918	429.0	24.0
126	1524465948	394.0	29.0
127	1524465978	387.0	22.0
128	1524466008	392.0	19.0
129	1524466038	3590.0	2572.0
130	1524466068	664.0	46.0
131	1524466098	658.0	31.0
132	1524466128	642.0	38.0
133	1524466158	607.0	35.0
134	1524466188	642.0	32.0
135	1524466218	663.0	25.0
136	1524466248	495.0	24.0
137	1524466278	470.0	21.0
138	1524466308	486.0	29.0
139	1524466338	458.0	25.0

Export Data Clear Table Load DataBase

歷史曲線圖 History Curve

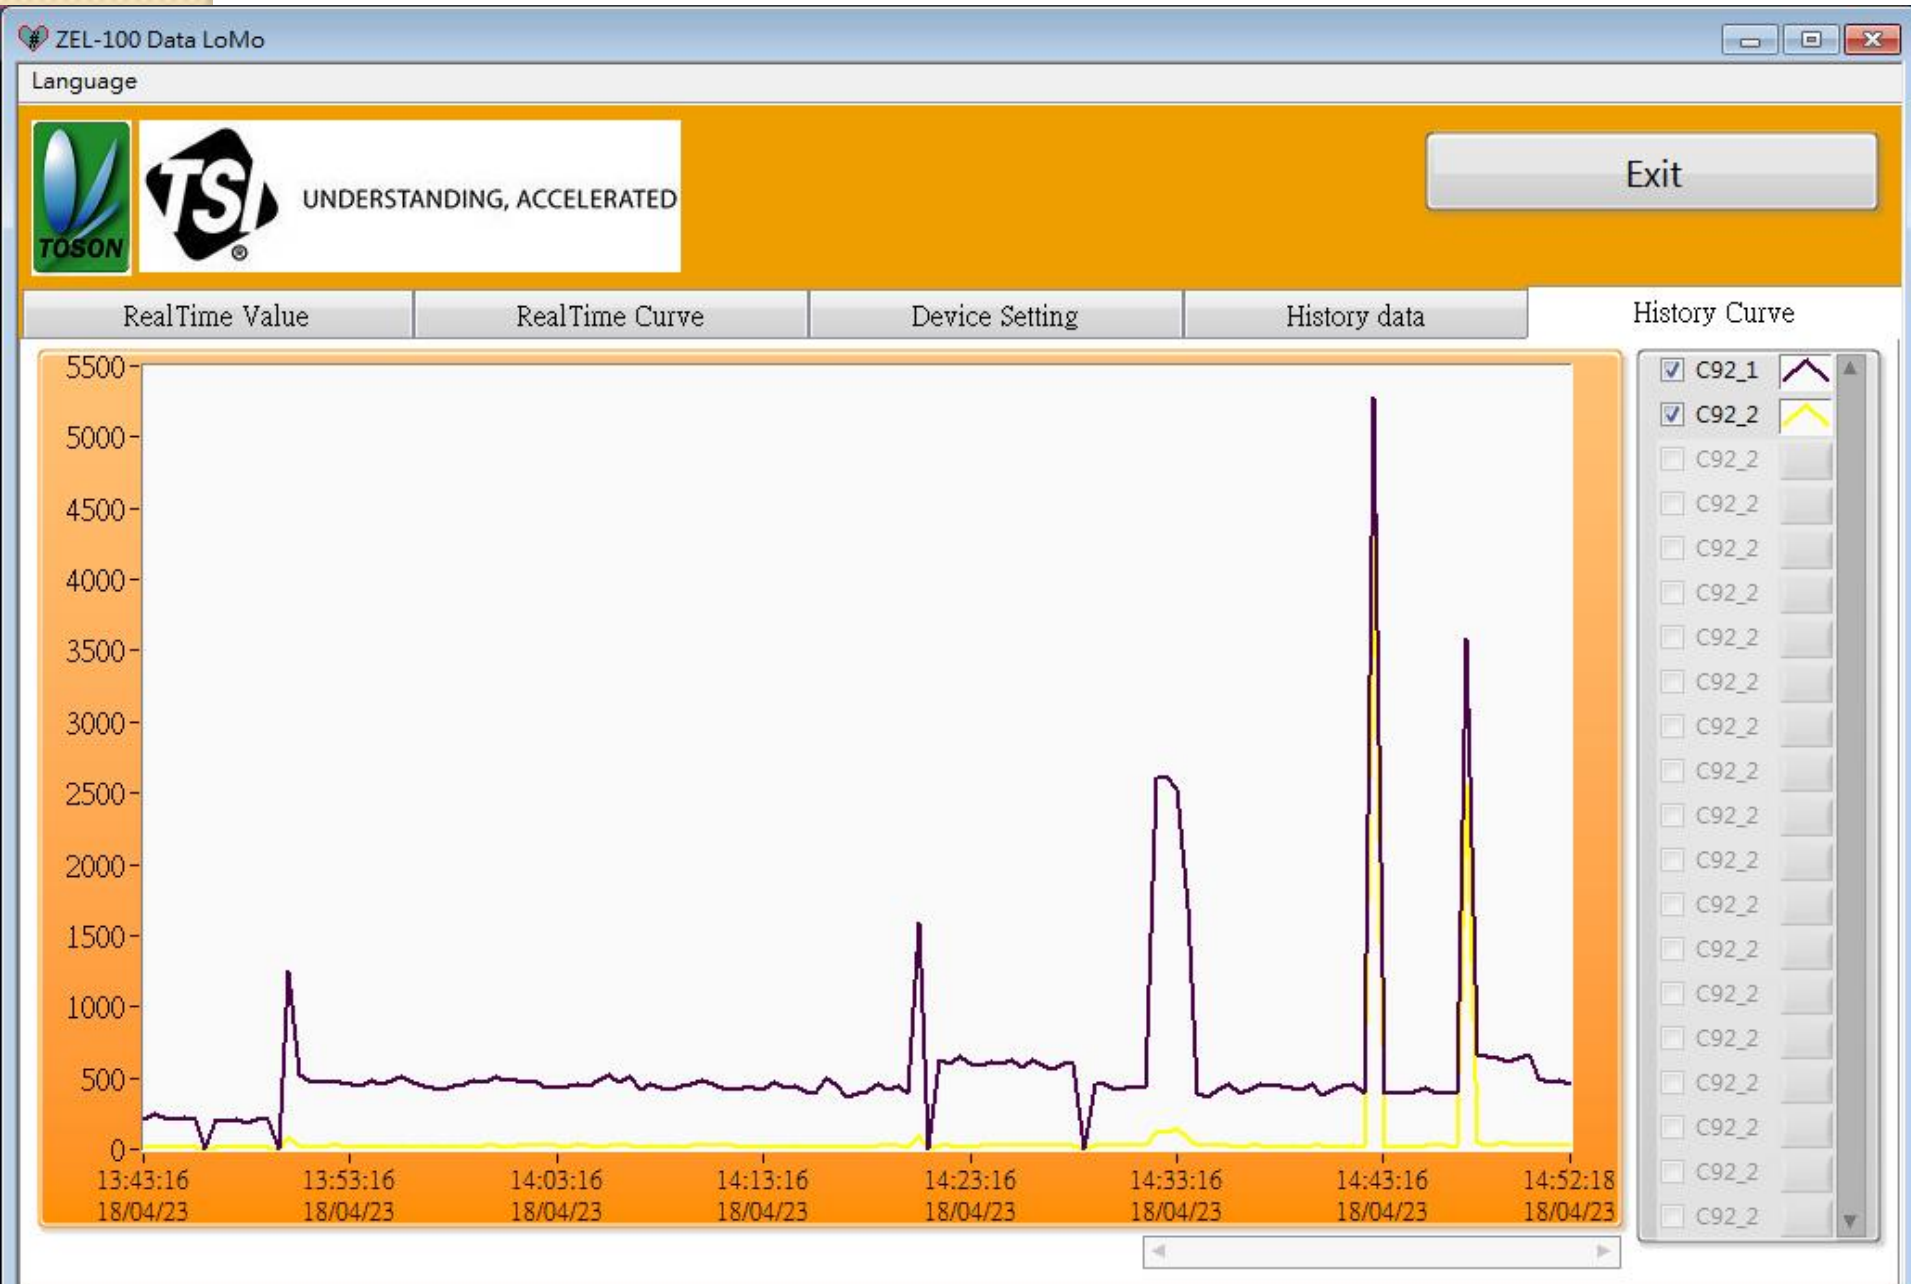

產品線

TSI AeroTrak Particle Counter Family



拓生科技有限公司
Toson Technology Co., Ltd

jack@toson.com.tw

+886-3-6676443#18

Jack Tsai